

VISTA KEYPAD OPERATION

To arm the system: When the lcd display reads "READY" and the green ready led is lit, press in your personal 4 digit code followed by the **AWAY {2}** key OR Hold Large Away Key until Red light comes on.

To disarm the system: Upon entering your home, the keypad will be beeping. Simply enter in your 4 digit code followed by the **OFF {1}** key.

To arm in STAY mode: Press in your 4 digit code followed by the **STAY {3}** key OR Hold Large Stay Key until Red light comes on. This will allow arming of all perimeter zones {doors, windows} and will deactivate all interior zones {motions}. You can now move freely within your home or business and have protection on the perimeter.

To arm in INSTANT mode: Press in your 4 digit code followed by the **INSTANT {7}** key. This is the same as the **STAY** mode only the delay zones will now alarm immediately once the door is open.

To BYPASS a zone: Press in your 4 digit code followed by the **BYPASS {6}** key and then the zone # you wish to bypass. **NOTE: Single digit zone #'s must be preceded by a zero!**

If an alarm occurs: If you inadvertently cause a fire or burg alarm, go to the keypad and press in your 4 digit code followed by the **OFF {1}** key. This will silence the speakers and keypad will show which zone went into alarm. Press in your 4 digit code followed by the **OFF {1}** key once more to reset alarm memory.

To turn on CHIME: Press in your 4 digit code followed by the **CHIME {9}** key. When a perimeter zone is opened, the keypad will emit a succession of beeps to alert you. To turn this function off, repeat previous instruction.

Changing a Master code: Enter in the existing 4 digit master code followed by the **CODE {8}** key. Enter in the user location, in this case enter 02. Finally, enter in the new master code twice. The keypad will beep once to confirm. If the keypad does not give the confirmation beep, repeat these steps.

Adding a secondary user code: Enter in the master code followed by the **CODE {8}** key. Enter in the user # (ex.; 03 - 04 - 05 etc.). Finally, enter in the new user code once. The keypad will beep once to confirm. If the keypad does not give the confirmation beep, repeat these steps.

Delete a user code: Enter in the master code followed by the **CODE {8}** key. Enter in the user # (03 - 04 - 05 etc). Finally, press the **# then 0** keys. The keypad will beep once to confirm. If the keypad does not beep, repeat these steps.